

TOP AND CONSOLE PARTS


For Models: LEC6848AW1, LEC6848AN1 (White) (Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3397545	Panel, Rear Console	11		Cover, Lint Screen	33 39	3391885 3395395	Connector, Edge Switch,
2	693994	Screw, Hex Head		688150	White		000000	Push-To-Start
3	693995	Screw, Hex Head		689310	Almond	48	3396145	Timer Knob
4		Cap, End (L.H.)	12	339229	Hinge, R.H.			Assembly
	3358531	White `		339230	Hinge, L.H.	49	3396175	Button, Push
	3358532	Almond	13	688983	Screw, 8–15 x 5/8			To Start
5	688805	Clip	14	3397537	Screw, 8–18 x 7/8	50	689180	Clip, Retainer
6	3353145	Screw, Console	15	3395683	Housing, Connector	51	343641	Screw, 10-16 x 1/2
7	694419	Buzzer, Mini			(Motor)	52	3396033	Wire, Jumper
8		Cap, End (R.H.)	16		Тор			(Signal Bypass)
	3358516	White		3396022	White	53	3396295	Bracket, Control
_	3358517	Almond	_,	3396023	Almond	54	0007000	Panel, Control
9	3396238	Switch,	21	3397273	Timer, 60 Hz.		3397223	White
4.0	0.40000	Clean Touch	29	3390646	Screw, Mounting		3397224	Almond
10	349639	Screen, Lint	20	257242	(8–18 x 5/16)	68	2202011	Wire, Jumper Violet
			30	357213 3396644	Nut, Push-In (2)		3393811 3393812	Blue
			32	3390537	Harness, Wiring Control,	72	690853	Wire, Ground
			32	3390331	Electronic	''	090000	vviie, Giodila
			•			•		

LITERATURE AND OPTIONAL PARTS

Illus. Part No. No.	DESCRIPTION	Illus. Part No. No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION		
		OPTIONAL PARTS NOT INCLUDED						
LITERATURE	PARTS	PAINT, TOU	PAINT, BULK (1 qt.)					
LIT3397597 LIT3396297	Instructions, Installation Use & Care Guide	72017 72107			799344 978883	White (Uncut) Almond (Uncut)		
LIT3398692	Label, Wiring Diagram	PAINT, PRE (13 oz.)	SSURIZED SPRAY					
Following Ma	y Be Purchased							
DO-IT-YOURSELF REPAIR MANUALS		350930 350956 350938 350941	Almond Primer, Gray					
LIT677818	Dryer		` ,					

CABINET PARTS

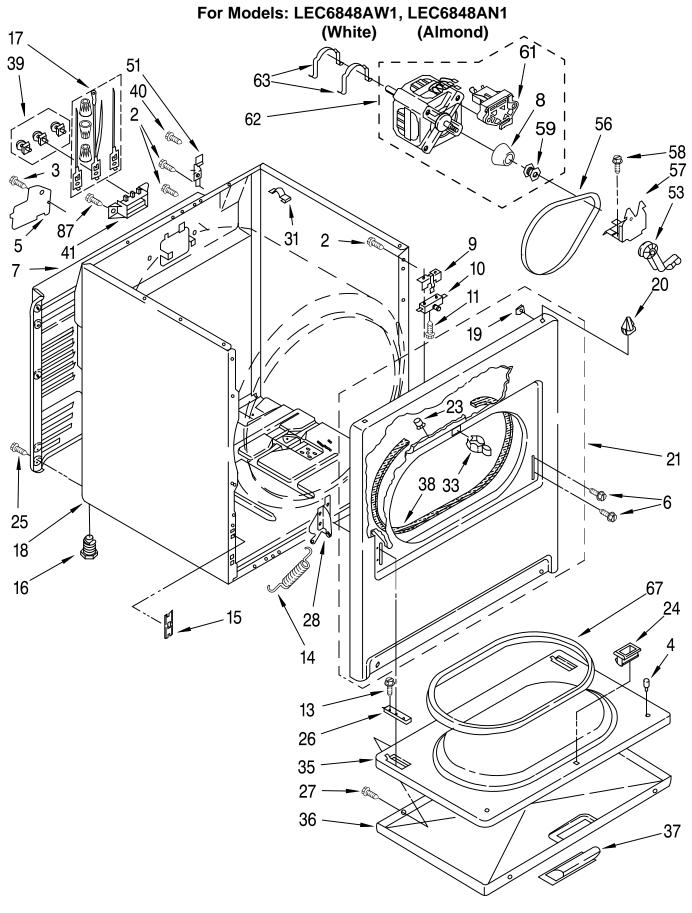

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


CABINET PARTS

For Models: LEC6848AW1, LEC6848AN1 (White) (Almond)

			1	\ -	(,		
Illus.	Part		Illus.	Part		Illus.	Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
2	343641	Screw, 10-16 x 1/2	20	690363	Lock, Front Top (2)	38	692493	Seal & Bearing
3	693995	Screw, 10-16 x 1/2	21		Panel, Front			Assembly
4	238614	Bumper		695620	White	39	279393	Terminal Block
5	690893	Cover, Block		695621	Almond			Kit (For
6	342043	Screw, 10-32 x 1/2	23	685203	Clip, Felt Pad (3)			Terminal Block)
7	348365	Panel, Rear	24	690081	Catch, Door	40	697776	Screw, 10-16 x 1/2
8	3393657	Restrainer, Belt			Assembly	41	690261	Block, Terminal
9	691581	Lever, Door Switch	25	693994	Screw, Hex	51	238088	Hinge, Top (2)
10	347207	Switch, Door			Washer Head (5)	53	691366	Idler & Pulley
11	98129	Screw.	26	337189	Clip, Hinge (2)			Assembly
		6-20 x 1-3/8	27	694091	Screw (6)	56	660996	Belt, Drive
13	3357011	Screw, 10-16 x 1/2	28	692498	Hinge, R.H.	57	3398422	Base, Motor
14	692495	Spring, Door (2)		692501	Hinge, L.H.	58	172455	Bolt,
15	3394083	Clip, Front	31	98997	Clip, Harness			5/16-18 x 3/4
		Panel (2)	33	696144	Strike, Door	59	3389627	Pulley, 60 Hz.
16	3392100	Foot, Dryer (4)	35	695737	Door, Rear	61	3395659	Switch, Motor
17	279318	Terminal, Tinned	36		Door, Front	62	3395652	Motor Assembly
		& Brass (3)	**	3393549	White			60 Hz.
		(Includes Illus. 39)		3393550	Almond	63	660658	Clamp, Motor (2)
18		Cabinet	37		Handle, Door			343481 (Alt.)
	3394118	White	-	690270	White			685441 (Alt.)
	3394119	Almond		690271	Almond	67	3390731	Seal, Door
19	98234	Clip, Ground				87	3393008	Screw, 10-16 x 1/2
		- 1.1						,
			•			•		

BULKHEAD PARTS

For Models: LEC6848AW1, LEC6848AN1

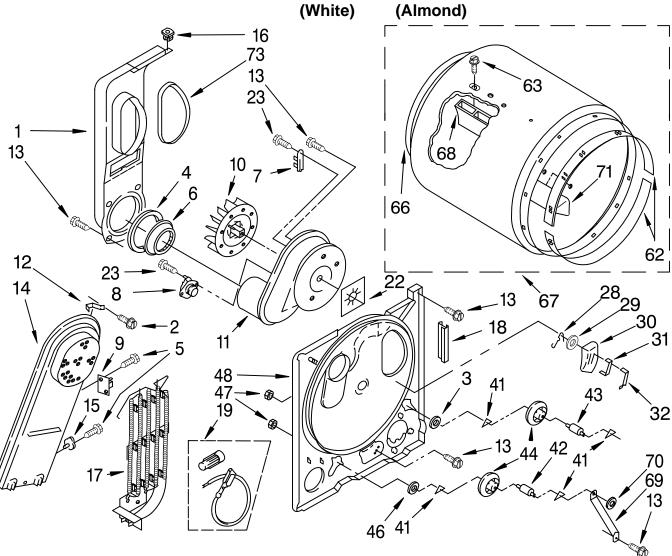

Illus. No.	Part No.	DESCRIPTION	IIIus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	348368	Lint Chute Assembly	12 13	337272 343641	Clip Screw, 10-16 x 1/2	30 31	348861 348859	Pad, Sensor Electrode, Inside
2 3 4	687128 3388703 347139	Screw, 10–16 x 1/2 Washer–Support Seal, Lint	14 15	695547 3390291	Box, Heater Thermostat, 250°F (121.1°C)	32 41 42	348860 690997 347364	Electrode, Outside Ring, Tri Shaft, L.H.
5 6	90767 696302	Chute Screw, 8A x 3/8 Shield, Exhaust	16 17	98460 660982	Nut, Push-In (2) Element, Heater 693300 (Alt.)	43 44 46	339489 3389901 348197	Shaft, R.H. Roller, Support Washer, Support
7 8	3392519 3387134	Thermal Fuse Thermostat, Internal-Bias	18	686889	693298 (Alt.) 693062 (Alt.) Pad, Cabinet	47 48 62	3359452 685823 692526	Nut, 3/8–16 Bulkhead Ring, Bearing
9	3389946	Thermal, Cut-Off (Hi-Limit Thermostat Illus.	19	279457	Wire Kit, Terminal (For Heater Element Wiring	63 66 67	97787 347885 695587	Screw, 11–16 x 7/8 Seal, Rear Drum Drum Assembly
10	694089	No.15 Included) Wheel, Blower (Includes Illus.	22 23	3392123 695239	Harness Repair) Seal, Blower Screw, 8–18 x 3/8	68 69 70	692490 348944 90296	Baffle, Drum (2) Bracket, Support Clip
11	695081	No. 22) Housing, Blower	28 29	342267 298877	Clip, Sensor Washer, Insulated	71 73	692491 339956	Baffle, Drum (1) Seal